

# A-10 10" Clear Housing

### Clear filter housing



A-10 10" Clear Housing: EV9100-01

EV9100-01

#### BENEFITS

10" utility housing

Holds any 10" drop-in filter or softening cartridge

Clear bowl with mounting bracket

Versatile basic design accomodates many applications

## Install vertically so bowls hang down.

Allow 2-1/2" clearance below the cartridge for easy cartridge replacement

Make sure o-ring on bowl is sufficiently lubricated

INSTALLATION TIPS

Always screw on bowls by hand; Do not use a housing wrench.

#### OPERATION TIPS

Change cartridges on a regular 6 month preventative maintenance program

Change cartridges according to cartridge specifications

#### APPLICATION/SIZING

For foodservice applications

Utility housing holds most 10" drop in cartridges

### SPECIFICATIONS

Overall Dimensions: 12-1/2"H x 4-7/8"W x  $\,$ 

4-7/8"D

Inlet connection: 1/2" FNPT

Outlet connection: 1/2" FNPT

Service Flow Rate: Maximum 5 gpm (19 Lpm)

Pressure Requirements: 10 psi -125 psi

(0.7 - 8.6 bar), non-shock


Temperature: 35°F - 100°F (2-38°C)

No electrical connection required

Shipping Weight: 4 lbs.

Operating Weight: 5 lbs.

## A-10 10" Clear Housing

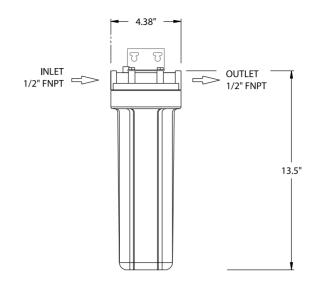

#### WARRANTY

Everpure water treatment systems (excluding replaceable elements) are covered by a limited warranty against defects in material and workmanship for a period of five years after date of purchase. Everpure replaceable elements (filter cartridges and water treatment cartridges) are covered by a limited warranty against defects in material and workmanship for a period of one year after date of purchase. See printed warranty for details. Everpure will provide a copy of the warranty upon request.



Worldwide Headquarters: EVERPURE, LLC 1040 Muirfield Drive Hanover Park, Illinois 60133 Toll Free (800) 323-7873 Tel (630) 307-3000 Fax (630) 307-3030 http://www.everpure.com In Europe:
Pentair Water Belgium B.V./B.A.
Industriepark Wolfstee
Toekomstlaan 30
B-2200 Herentals
BELGIUM
TEL: +32.(0).14.283.500

B-2200 Herentals JAPAN
BELGIUM TEL: 81.(0)42.77
TEL: +32.(0).14.283.500 FAX: 81.(0)42.77
FAX: +32.(0).14.283.505

Everpure 1040 Muirfield Drive Hanover Park, IL 60133 In Japan:
Hashimoto MN Bldg. 7F
3-25-1 Hashimoto Sagamihara-Shi Kanagawa 229-1103 JAPAN
TEL: 81.(0)42.775.3011
FAX: 81.(0)42.775.3015